

Top tips for laundry...



Always check your care labels...

Never fill the machines above 3/4 full...

Check your pockets & the machine first...

Clean the lint filter on the dryer before you use it.



CONTACT US...

If you need help or your machine won't start,
Get in touch!



0800 141 2331
service@washstation.co.uk



Laundry room User guide

How to use Washnet as a guest to do your laundry...



YOUR GUIDE TO GETTING STARTED...



Using Washnet



- Go to washnet.co.uk
- Select your region & city. Then you can select a laundrette, the nearest 3 are geo-located.
- Choose a washer or a dryer, available machines are shown in green.
- Choose the cycle you would like to use according to your load.
- Now you can make payment for the machine and start the cycle.

Using your Machines



- Load your machine between 1/4 & 3/4 full. For optimal results we recommend halfway.
- For the Washers, add your detergent directly in to the drum and close the door.
- For the Dryers, make sure you clean the lint filter before and after use.
- You will be prompted to push 'start' or select cycle on the machine. Press this to begin the cycle.